


FITTING

INSTRUCTIONS

ALTERNATOR (All Alternators)

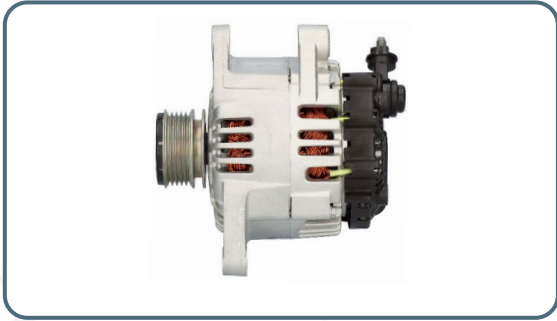

ALTERNATOR REMOVAL AND INSTALLATION



Step 1. Disconnect the negative battery cable.




Step 2. Disassemble the alternator belt to disconnect the alternator connector.



Step 3. Pull out the old alternator from the vehicle.



Step 4. Prepare the new Valeo alternator.

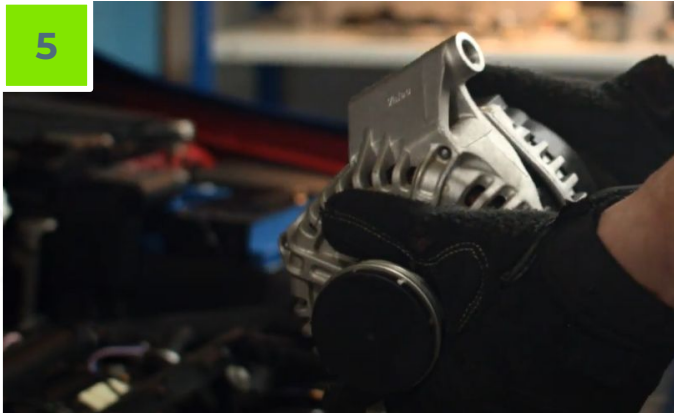

Step 5. Install the alternator.



Step 6. Install the alternator belt then fasten the belt tensioner based on manufacture torque recommendation then connect alternator connector.



Step 7. Connect the negative battery cable.